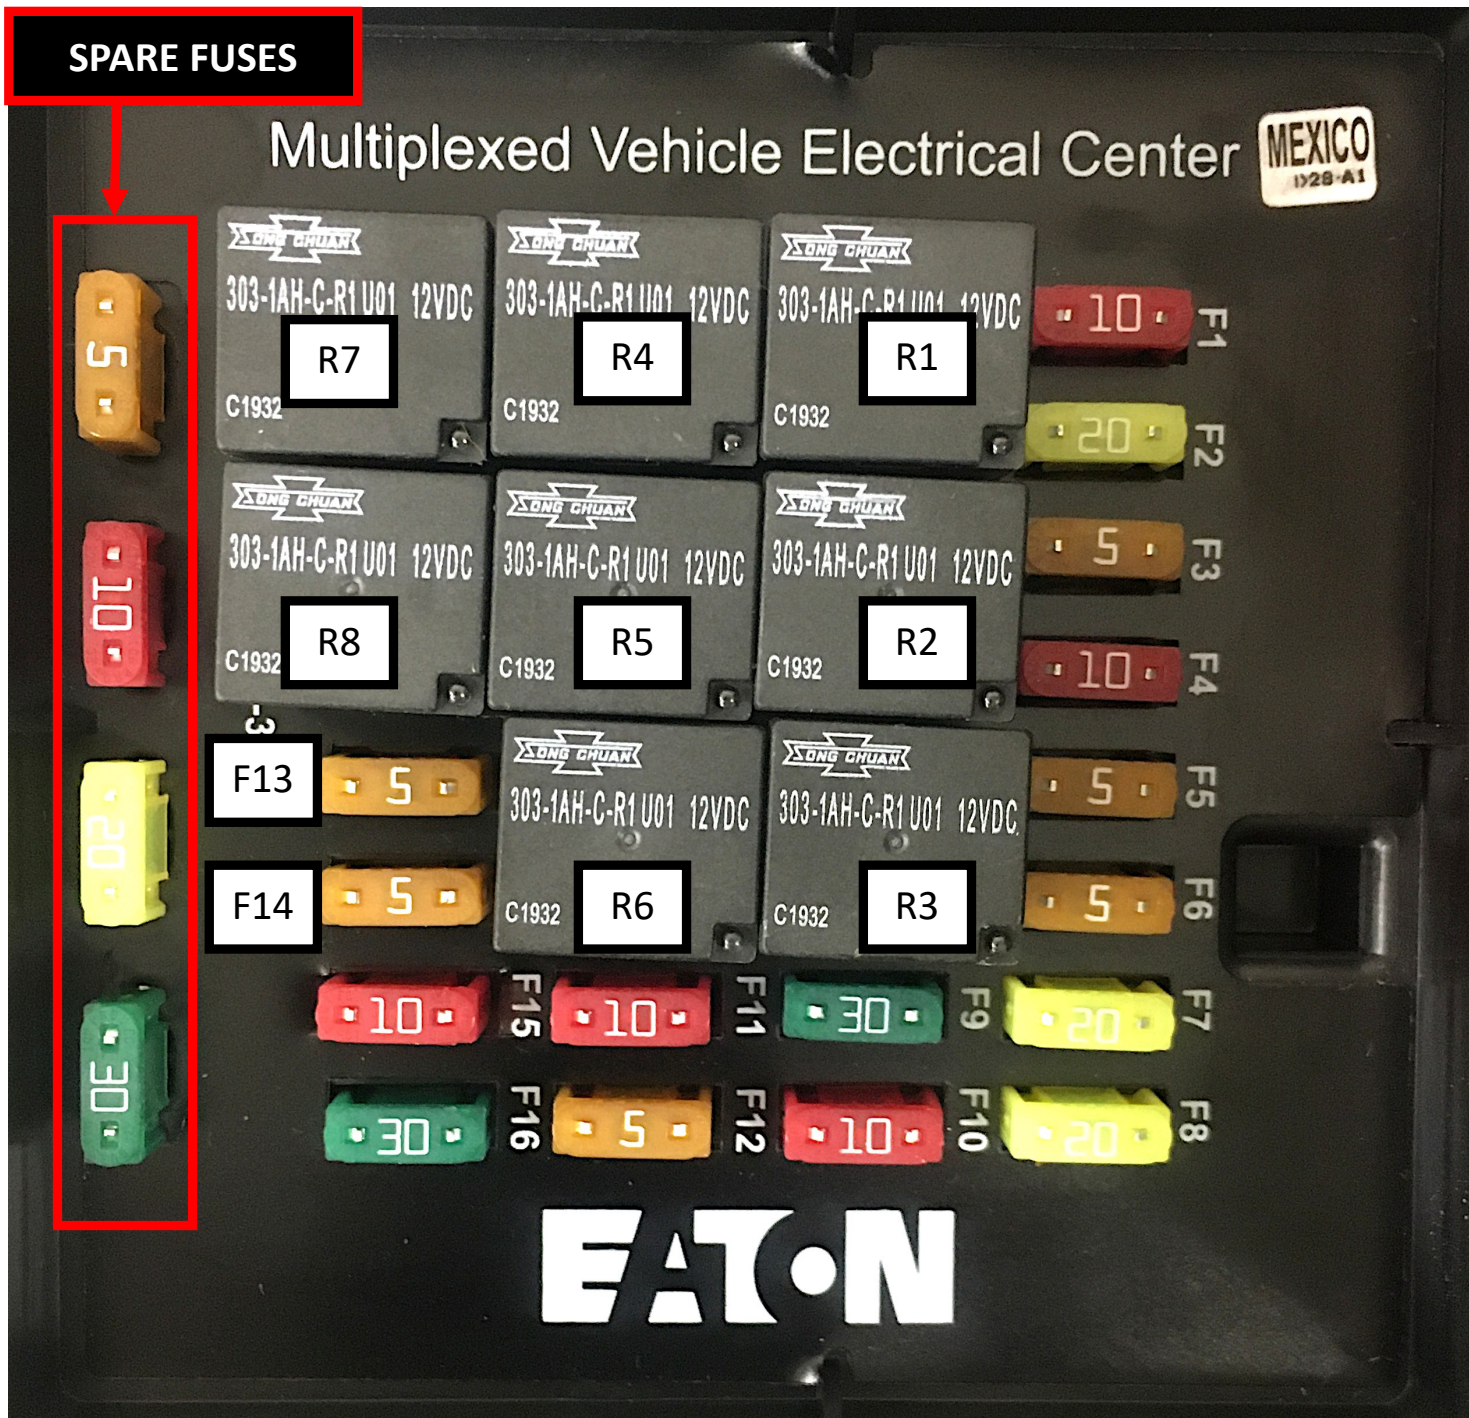


SPARE FUSES


F1 HEADLIGHTS **10 AMP**

F4 FLASHERS **10 AMP**

F7 CAB PRESSURIZER **20 AMP**

F10 12V **10 AMP**

F13 228 12V **5 AMP**

F16 CONTROLLER POWER **30 AMP**

F2 SPARE **20 AMP**

F5 AXIOM / BIN STOP **5 AMP**

F8 SPARE **20 AMP**

F11 RADIO **10 AMP**

F14 DI4 12V **5 AMP**

F3 SPARE **5 AMP**

F6 TRACTION **5 AMP**

F9 A/C **30 AMP**

F12 SPARE **5 AMP**

F15 BODAS ELECTRONIC **10 AMP**

R1 HEADLIGHTS

R4 SPARE

R7 SPARE

R2 FLASHERS

R5 SPARE

R8 AXIOM / BIN STOP

R3 CAB PRESSURIZER

R6 TRACTION